

EWT7588H1WB  
EWT8588H1WB  
EWT9588H1WB  
EWT0H88H1WB

EWT0H88M1SB  
EWT2H88M1SB




---

Top Load Washing Machine

---

User Manual

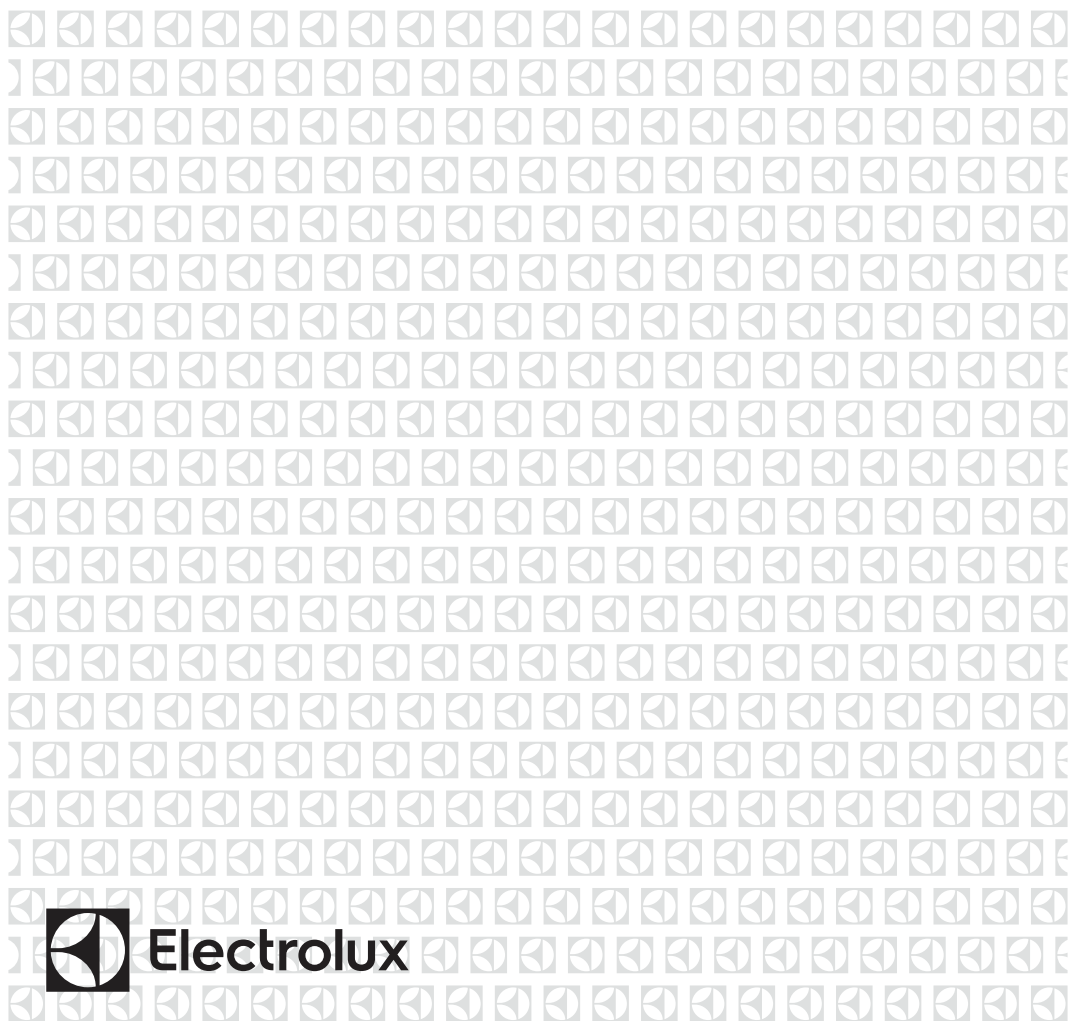

**Electrolux**

## WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.




**Visit our website to:**



Get usage advice, brochures, trouble shooter, service information, buy accessories & spare parts, online product registration : **[www.electrolux.com](http://www.electrolux.com)**

## CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts. When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. Model, PNC, Serial Number.

-  Warning / Caution-Safety information.
-  General information and tips
-  Environmental information.

Subject to change without notice.

---

# CONTENTS

<b>1. SAFETY INFORMATION</b>	
1.1 Conditions Of Use .....	4
1.2 Child Safety .....	4
1.3 General Safety .....	6
1.4 Installation .....	6
1.5 Use .....	7
<b>2. PRODUCT DESCRIPTION</b>	
2.1 Parts .....	8
2.2 Accessories .....	8
<b>3. CONTROL PANEL</b>	
3.1 Control Panel Description .....	9
3.2 Program Chart .....	10
3.3 Options .....	11
3.4 Personalized setting of washing program .....	12
3.5 Operations of washing process .....	12
<b>4. PREPARATION BEFORE WASHING</b> .....	13
<b>5. DAILY USE</b>	
5.1 Washing .....	13
5.2 After Washing .....	13
5.3 Reminder In Washing Clothes .....	13
5.4 The Usage Of Detergent And Washing Powder .....	14
<b>6. WASHING HINTS</b>	
6.1 Sort Your Washing Into Separate Wash Loads .....	15
6.2 Pre-treatment Sprays And Stain Removers .....	16
6.3 Detergent .....	16
<b>7. INTERNATIONAL WASH CODE SYMBOLS</b> .....	17
<b>8. CARE AND CLEANING</b>	
8.1 Cleaning the cabinet .....	18
8.2 Cleaning the inlet filter.....	18
<b>9. TROUBLESHOOTING</b> .....	19
<b>10. TECHNICAL DATA</b> .....	20
<b>11. INSTALLATION</b>	
11.1 Installation area.....	20
11.2 Unpacking the washing machine .....	21
11.3 Installation of drain hose .....	21
11.4 Adjusting the washing machine.....	22
11.5 Selection of tap.....	22
11.6 Connection of inlet hose, tap and washing machine .....	22
<b>12. ENVIRONMENT CONCERNS</b>	
12.1 Packaging Materials .....	24
12.2 Old Machine .....	24
12.3 Ecological Hints .....	24
<b>13. CONTACT DETAILS ELECTROLUX CUSTOMER CARE</b> .....	25

# 1. SAFETY INFORMATION

## 1.1 Conditions Of Use

This appliance is intended to be used in household and similar applications such as:

- Farm houses
- By clients in serviced apartments, holiday apartments and residential type environments.

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings.

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features.

Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

## 1.2 Child Safety

- This washing machine is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the washbowl.
- During operation, please keep kids and pets far away from the machine.

 **Risk to children !**

- **EN countries:** the appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- **IEC countries:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### 1.3 General Safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Make sure that small pets do not climb into the washbowl. To avoid this, please check inside the washbowl before using the appliance.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the agitator.
- Only use manufacturer's recommended quantities of fabric softener and detergent. Damage to the fabric or appliance can occur if you exceed the recommended amount.
- Do not use your washing machine to wash articles with whalebones, material without hems or torn material.
- Always unplug the appliance and turn off the water supply after use, clean and maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

### 1.4 Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- After having installed the appliance, check that it is not standing on the inlet and drain hose.
- If the appliance is installed on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- Always be sure, that there is no water leakage from hoses and their connections after the installation.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber.
- Any electrical work required to install this appliance should be carried out by a qualified electrician.



**May cause electric shock!** if the machine is not connected to an earthed/ground system. DO NOT touch the wet clothes and metal parts.



Appliance should not be installed in a humid place.



This appliance is for indoor use only.



The openings must not be obstructed by a carpet.



Remove all packages before using the appliance. Otherwise, serious damage may result.



This machine is not intended for built-in usage.



The washing machine with single inlet valve only can be connected to the cold water supply.



Plug must be accessible after installation.

---

## 1.5 Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label.
- Do not overload the appliance. See the relevant section in the user manual.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.



Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible.

- Before hand thoroughly rinse items of washing by hand.
- Hands shall not be inserted into running spin-dry tub.
- If the spin-dry tub does not stop within 15 seconds after opening the cover, please stop using the machine and have it repaired.
- Never refill the water by hand during washing.




---

### Risk of damaging appliance !

- Your product is only for home use and is not only designed for the textiles suitable for machine washing.
  - Do not climb up and sit on top cover of the machine.
  - Do not lean against machine door.
  - Cautions during Handling Machine:
    - Transport bolts shall be reinstalled to the machine by a specialized person.
    - The accumulated water shall be drained out of the machine.
    - Handle the machine carefully. Never hold each protruded part on the machine while lifting. Machine door can not be used as the handle during the conveyance.
    - This appliance is heavy. Transport with care.
  - Please do not close the machine lid with excessive forces.
  - Do not wash carpets.
-


## 2. PRODUCT DESCRIPTION

### 2.1 Parts

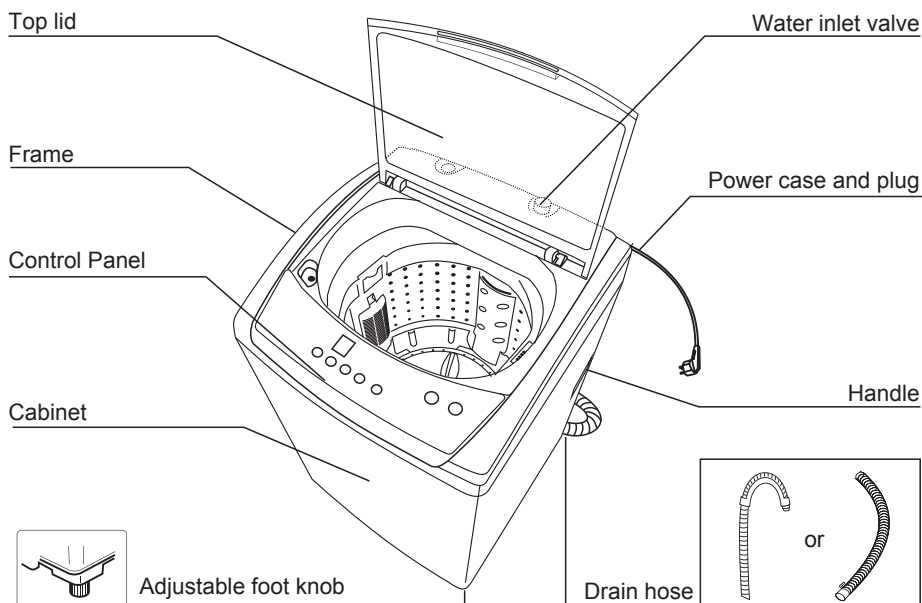

**Note:** The product line chart is for reference only, please refer to real product as standard.

### 2.2 Accessories

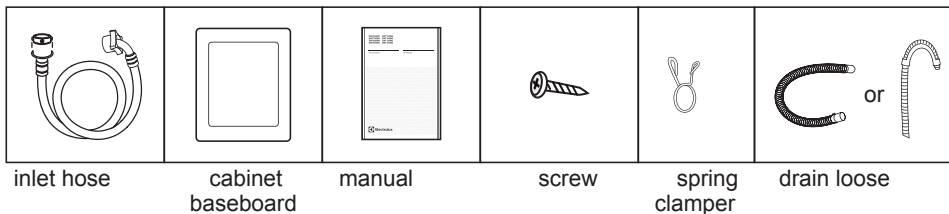


**Note:** If the drain hose is already installed on the machine, then there is no spring clammer and drain hose in the accessories.



## 3. CONTROL PANEL

### 3.1 Control Panel Description

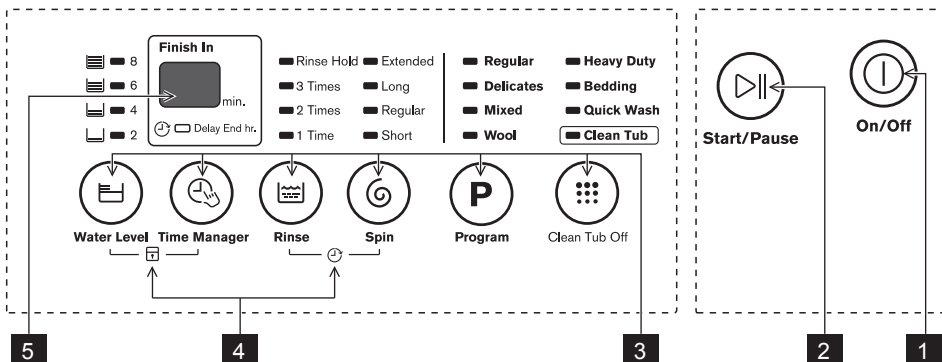

#### 1 On/Off button

Product is switched On or Off.

#### 2 Start/Pause button

Press the button to start or pause the washing cycle.

#### 3 Program buttons

Available according to the laundry type.

#### 4 Options

This allows you to select an additional function and will light when selected.

#### 5 Display

The display shows the settings, estimated time remaining, options, and status messages for your washer. The display will remain on through the cycle.



**Note:** The chart is for reference only, please refer to real product as standard.

### 3.2 Program Chart

- xx -xx Programmes are available according to the laundry type.
- xx -xx Only washers have these functions
- xx -xx
- xx



**Program**

Programmes	Description
Regular	Standard fabric washing program, suitable to wash ramie cotton fabric. Wash for once, rinsing for twice, the spin time is a little long.
Delicates:	Mid/High/Low water level selection, the tempo is soft, slow washing and spinning speed, to make the lightest wear and deformation.
Mixed	Suitable for washing clothes mixed together.
Wool	Suitable for washing wool clothes, the maximum washing capacity of 2kg.
Heavy Duty	Washing ability is strong to wash dirtier clothes
Bedding	Suitable for washing bed sheets, towels and other large textile fabrics.
Quick Wash:	Suitable to wash light stained clothes and clothes in summer.
Fuzzy weighting:	The washing machine will select the water level automatically according to the load weight. 1. When there's water in the tub, this function is not available; 2. Before press [Start/Pause] button, if consumer selected the water level, there will be no fuzzy weighting function; 3. After press [Start/Pause] button, the washing machine will run the fuzzy weighting function. Consumer can also select the water level to set the water level as needed.
Free-cleaning function	Free-cleaning function: when the tub is spinning, The strong water flow will scour the inner/outer tub and reduce the dirt residue. The machine has the free-cleaning function when start the machine. (Clean tub light is on), and press the tub clean button to turn off the function.



**Note: The quick wash program is recommended for water saving.**

### 3.3 Options

- **Water Level**



Water Level

Select water level according to clothing categories, degree of soiling and washing habits of customers.

- **Function**



Time Manager Rinse Spin

Washing time, rinsing times, spinning time and other settings can be selectable.


- **Delay**



Rinse Spin

Set the Delay function:

1. Select a program.
2. Press the Delay button to choose the time (the delaying time is 0-24 H.)
3. Press Start/Pause to commence the delay operation.

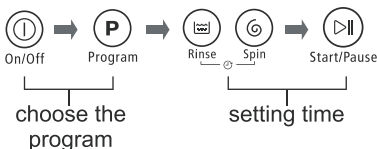

**i** **Cancel the Delay function:**

Press the Delay button until the display be 0 H. It should be pressed before starting the program. If the program already started, should press the On/Off button to reset the program.

**i** **CAUTION!**

If there is any break in the power supply while the machine is operating, a special memory stores the selected program and when the power is restarted.

- **Clean Tub**



Clean Tub Off



On/Off



Clean Tub Off



Start/Pause

- **Child Lock**



Water Level



Time Manager

To avoid operation of functions accidentally pressed by children



On/Off



Start/Pause



Water Level



Time Manager

**i** **CAUTION!**

- Press the two buttons for 3 seconds to release the Child Lock function.
- The “Child Lock” will lock all buttons except On/Off button.
- In case of emergency, unplug the machine.

### 3.4 Personalized setting of washing program


Customers can select washing program according to actual demand, and set washing time, rinsing time, spinning time, water level and appointment time.




### 3.5 Operations of washing process

Customers can set single process or combinations of washing, rinsing and spinning freely according to demand. Detailed operations as follows for different models.


• **Wash**

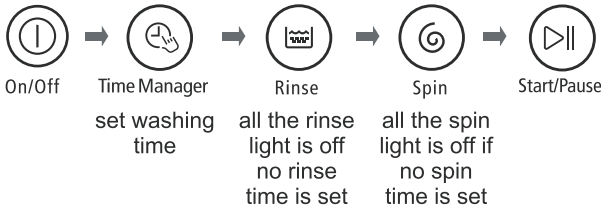

• **Spin**

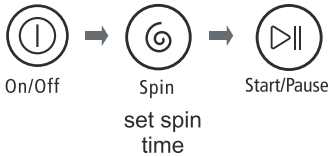


• **Wash + Rinse + Spin**

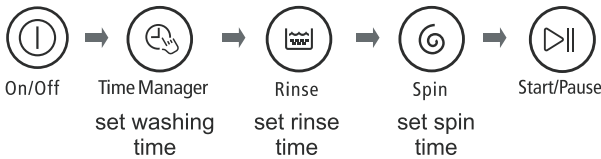

**i Note!**  
Other process combinations are just like above.


## 4. PREPARATION BEFORE WASHING

- Before washing, please make sure it's installed properly.
- Before washing it at first time, the washing machine shall be operated in one round of whole procedures without clothes in as follows.

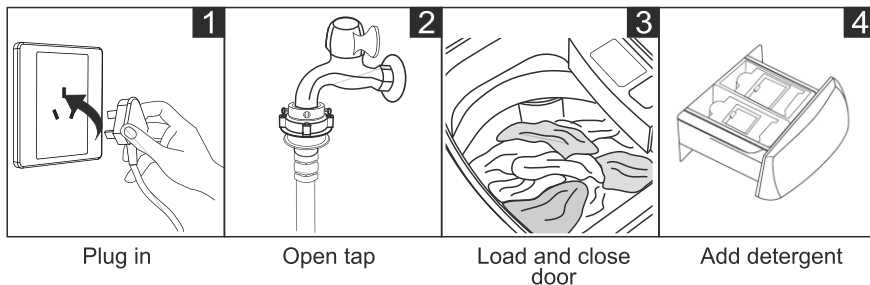

## 5. DAILY USE

### 5.1 Washing

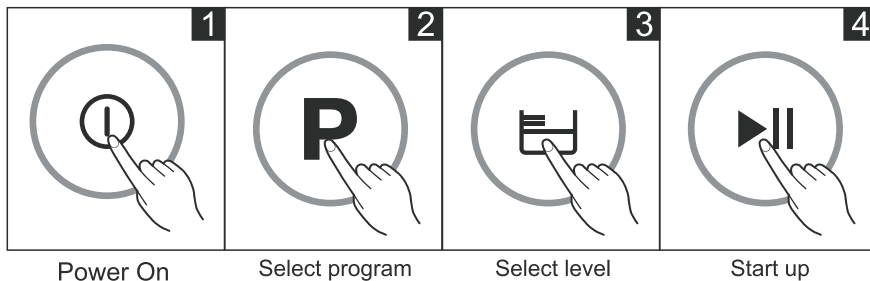

#### **i** NOTE:

If default is selected, step 2, 3 can be skipped.

### 5.2 After Washing

Buzzer will beep after washing finished and the power supply will cut off automatically. Then unload the laundry.


If the machine is placed under condition of 0°C or less, then it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose are not frozen before use.

### 5.3 Reminder In Washing Clothes


- The working condition of the washer should be 0 - 40°C. If used under 0°C, the inlet valve and draining system may be damage.

- Please check the labels and the explanation of using detergent before wash. Use non-foaming or less-foaming detergent suitable for washing properly.


- Check the label.

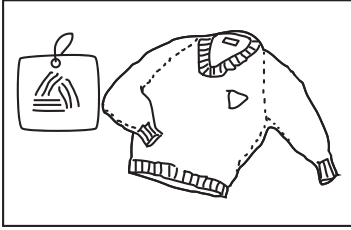


- Knot the long strips, zip or button.

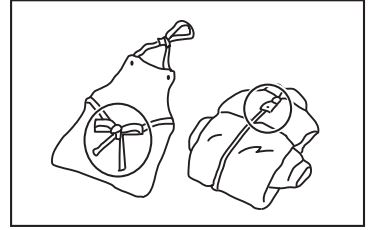


- Put small clothes into the pillow slip.

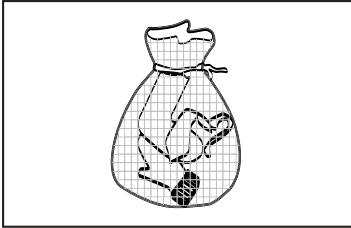

- Separate clothes with different texture.

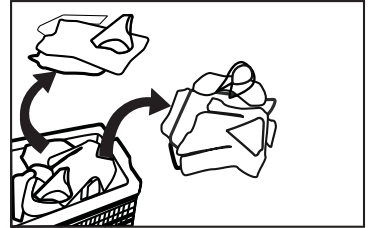


- Take out the items out of the pockets.

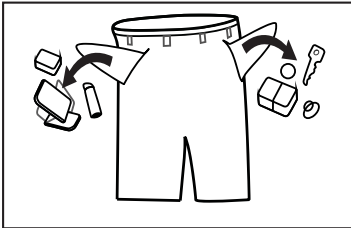

**! WARNING!**

- Turn easy-piling and long-pile fabric inside out.

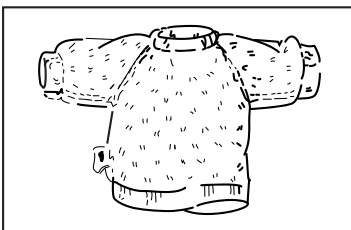

- When washing a single cloth, it may alarm due to unbalance. Therefore it is suggested to add one or two more clothes to be washed together so that draining can be done smoothly.
- Do not wash clothes that are with kerosene, gasoline, alcohol and other flammable materials.

## 5.4 The Usage Of Detergent And Washing Powder

- As for the agglomerated or ropy detergent or additive, before they are poured into the detergent box, it is suggested to use some water for dilution to prevent the inlet of detergent box from being blocked and overflowing while filling water.
- Please choose suitable type of the detergent for the various washing temperature to get the best washing performance with less water and energy consumption.

## 6. WASHING HINTS

These Washing Instructions are of a general nature and you should get good wash results by following them.

However, due to the variables of fabric types, soil levels, detergent types and available program settings you may find some combinations of these which do not always result in the perfect wash.

If for example you see residuals of detergent or soils on some items, please read the section Residues on washed items paragraph.

Over time you will learn what is the best set-up of programs, detergent and load sorting for different load types and soils.

### 6.1 Sort Your Washing Into Separate Wash Loads



- Each load of washing should contain clothing which needs the same washing conditions. For example, you should not wash delicate clothes with very dirty work clothes.
- Colour fast and non-colourfast fabrics should be separated. Knowing the type of fabrics you have and how dirty they are will help when you make selections from the wash program options.
- Some fabrics are lint collectors and can pick up lint, dirt and colour from other fabrics which are lint producers. Some examples are listed below:

Lint collectors	Lint producers
- Corduroy - Synthetics - Permanent press fabrics	- Towels - Nappies - Chenille/ Candlewick

#### **i** NOTE:

Make sure that you wash lint collectors separately from lint producers.

- Never wash whites and coloureds together. Whites may lose their “whiteness” in the wash.
- New coloured items may run in the first wash; they should therefore be washed separately the first time.

#### **!** IMPORTANT!

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).

- Button up pillowcases, close zip fasteners, hooks and poppers.
- Tie any belts or long tapes.
- Remove persistent stains before washing.
- Rub particularly soiled areas with a special detergent or detergent paste.
- Treat curtains with special care.
- Wash bras, pantyhose and other delicates in a mesh laundry bag, which you can purchase from supermarket.
- Remove hooks or tie them up in a bag or net.

## 6.2 Pre-treatment Sprays And Stain Removers



### WARNING!

Pre-treatment sprays and stain remover can damage plastic components on your washing machine.

If you use pre-treatment sprays or stain removers, apply them to the clothing well away from your washing machine.

## 6.3 Detergent

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment.

Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

The choice of detergent will depend on the type of fabric (delicates, woolens, cottons, etc.), the colour, washing temperature and degree of soiling.

- Don't use the wrong type of detergent. You must use a low sudsing detergent designed for front load washing machines or high efficiency top loaders, such as Cold Power for Front Loaders and High Efficiency Top Loaders or detergents labelled "Matic".
- Don't use soap-based products in your washing machine.
- Don't use too much detergent. This can result in excessive suds that can cause low spin speeds, poor rinsing and overloading the motor during spin stages of the wash program.
- Don't use too little detergent because you will get a poor wash. If you think you need more, increase dosages by only small amounts to avoid excessive suds.

## Quantity of detergent to be used

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

Water hardness is classified in so-called "degrees" of hardness.

Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority.

































Follow the product manufacturers' instructions on quantities to use.

- Not enough washing powder causes: the washload to turn grey, greasy clothes.
- Too much washing powder causes: sudsing, reduced washing effect, inadequate rinsing.
- Use less detergent if: you are washing a small load, the laundry is lightly soiled, large amounts of foam form during washing.



## 7. INTERNATIONAL WASH CODE SYMBOLS

**i** These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry.

 <b>Energetic wash</b>	 Max. wash temperature 95 °C	 Max. wash temperature 60 °C	 Max. wash temperature 40 °C	 Max. wash temperature 30 °C	 Hand wash	 DO NOT wash at all
 <b>Delicate wash</b>			 			
 <b>Bleaching</b>	 Bleach in cold water			 DO NOT bleach		
 <b>Ironing</b>	 Hot iron max. 200 °C	 Warm iron max. 150 °C	 Lukewarm iron max. 110 °C	 DO NOT iron		
 <b>Dry cleaning</b>	 Dry cleaning in all solvents	 Dry cleaning in perchlorethylene, petrol, pure alcohol, R 111 & R 113	 Dry cleaning in petrol, pure alcohol and R 113	 DO NOT dry clean		
 <b>Drying</b>	 Flat	 On the line	 On clothes hanger	 High temperature	 Low temperature	 DO NOT tumble dry


## 8. CARE AND CLEANING

**WARNING!** You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

### 8.1 Cleaning the cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use the wet cloth to wipe it off immediately. No sharp items are allowed.

**Caution! Do not use alcohol, solvents or chemical products.**

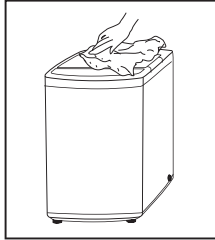


**Note: formic acid and its diluted solvents or equivalent are forbidden, such as alcohol, solvents or chemical products, etc.**

3. Use the brush to clean the filter.
4. Reconnect the inlet pipe.

### Lint filter clean

1. There is a built-in lint filter in your washer. It can help to collect lint during washing cycle.
2. It is suggested to clean the lint filter every 10 cycles.
3. Take it out and clean the filter with water. Then place it back into the washer.

#### magic filter

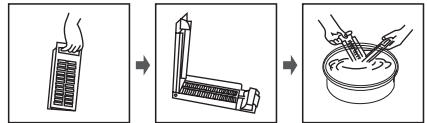

#### normal filter





### 8.2 Cleaning the inlet filter

**Note: inlet filter must be cleaned if there is less water.**

Washing the filter in washing machine:

1. Screw off the inlet pipe from the backside of the machine.
2. Pull out the filter with long nose pliers and reinstall it back after being washed.

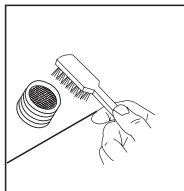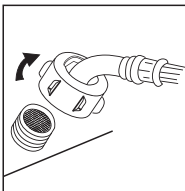

## 9. TROUBLESHOOTING

If the appliance does not work or it stops during operation, try to find the solution to the problem with the help of the code guide below. If not, contact the service center.

Description	Inspection Items
No washing	<ul style="list-style-type: none"> <li>• If the power is off or the fuse is burned out.</li> <li>• If the power supply voltage is too low.</li> <li>• If the water amount reaches to the required water level.(The washer will not work if the water amount does not reach the required water level)</li> <li>• If it is set to "Delay" washing mode. (It will only start to work until the reservation time reached)</li> </ul>
No water flows in	<ul style="list-style-type: none"> <li>• If the power is off or the fuse is burned out.</li> <li>• If the water supply is cut off or the water pressure is too low.</li> <li>• If the inlet hose is properly connected and the water tap is opened.</li> <li>• If the filtering screen of inlet valve is blocked by dirt.</li> <li>• If the coil of inlet valve is damaged. (The slight electromagnetic sound is normal phenomenon when the inlet valve is switched on)</li> <li>• If the "Start / Pause" button is pressed after the power switch is pressed.</li> </ul>
Abnormal draining	<ul style="list-style-type: none"> <li>• If the water drain hose is placed very high.</li> <li>• If the end of water drain hose is sealed in pond.</li> <li>• If the internal rubber ring of drain valve is blocked by dirt.</li> </ul>
Abnormal spin	<ul style="list-style-type: none"> <li>• If the door lid is closed.</li> <li>• If all clothing piled largely at one side of barrel or the clothing is excessively placed.</li> <li>• If the washer is not placed in stable condition or it is placed in inclination state. (The ground is not flat).</li> <li>• If the motor belt is loosened.</li> </ul>

Description	Reason	Solution
E1	Alarm for abnormal water intaking.	Check the water tap is opened or not.
E2	Alarm for water drain has not finished.	Check the water level sensor and drain pump.
E3	Alarm for lid not closed before wash and spin.	Closed the lid.
E4	Alarm for washing stay at one side.	Manually balance clothes in the barrel by hands.
XX	Others	Please try again first, call up service line if there are still troubles



**Note:** After checking, activate the appliance. If the problem occurs or the display shows other alarm codes again, contact the service.

## 10. TECHNICAL DATA

Power Supply	230V~, 60Hz
Standard Water Pressure	0.03MPa~0.8MPa

Model	Washing Capacity	Dimension (W*D*Hmm)	Net Weight	Rated Power
EWT7588H1WB	7.5kg	515x525x930	31kg	400W
EWT8588H1WB	8.5kg	550x565x925	39kg	450W
EWT9588H1WB	9.5kg	550x565x965	40kg	450W
EWT0H88H1WB	10.5kg	580x596x968	42kg	480W
EWT0H88M1SB	10.5kg	580x596x968	42kg	390W
EWT2H88M1SB	12.5kg	601x625x990	46kg	560W

## 11. INSTALLATION

### 11.1 Installation area





#### WARNING!

- Stability is important to prevent the product from wandering!
- Make sure that the product should not stand on the power cord.

Before installing the machine, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface
2. Avoid direct sunlight
3. Sufficient ventilation
4. Room temperature is above 0 °C
5. Keep far away from the heat resources such as coal or gas.

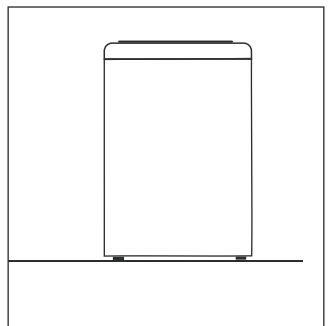
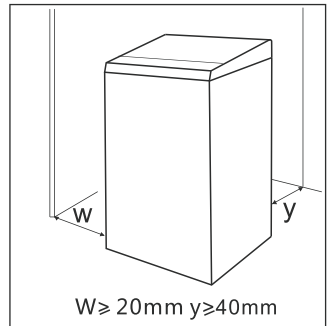


## 11.2 Unpacking the washing machine




### WARNING!

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
  - There is a risk of suffocation ! Keep all packaging well away from children.
1. Remove the cardboard box and styrofoam packing.
  2. Lift the washing machine and remove the base packing.
  3. Remove the tape securing the power supply cord and drain hose.
  4. Remove the inlet hose from the drum.

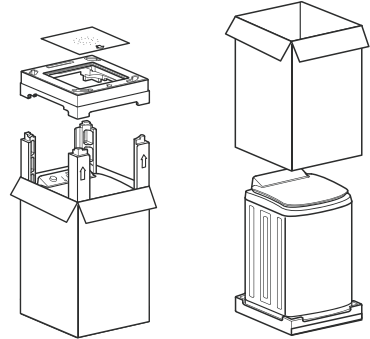
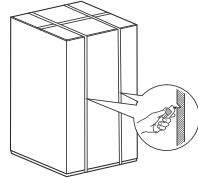


## 11.3 Installation of drain hose

1. Completely sleeve the drain hose over the sewer.
2. Fix and tighten it with a hoop. (As shown in the figure )

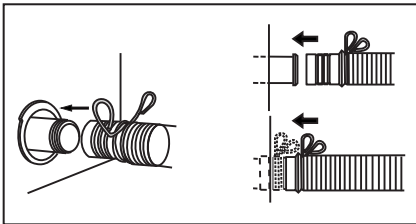

- Position drain hose properly, otherwise damage might result of water leakage.
- If drain hose is too long, donot force it into washing machine as it will cause abnormal noises.

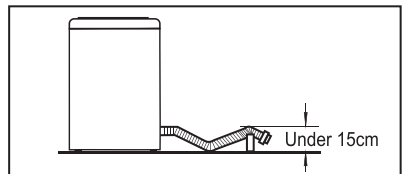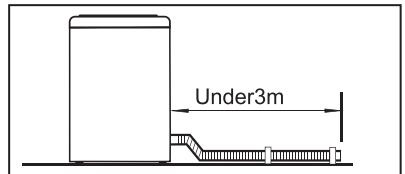


### NOTE!

The drain hose of the machine with upper drain system has already been assembled before leaving the factory. This picture is suitable for lower drain system.



### WARNING!

- Do not kink or protract the drain hose.

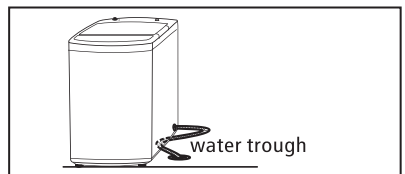


### 11.4 Adjusting the washing machine

**i** **WARNING!**

The lock nuts on all four feet must be screwed tightly against the housing.

1. Check if the legs are closely attached to the cabinet. If not, please turn them to their original positions tighten the nuts.
2. Check alignment of the product with a spirit level and if required, correct.
3. Loosen the lock nut and turn the feet until it closely contacts with the floor.
4. After being locked properly, press four corners again to make sure that it has been adjusted properly.

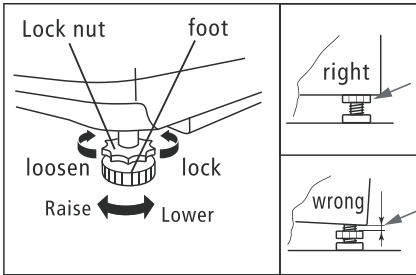

### 11.5 Selection of tap

Please select appropriate tap.




- Ordinary faucet
- Screw tap




- Special washing machine tap

### 11.6 Connection of inlet hose, tap and washing machine


1. Connection between ordinary tap and inlet hose

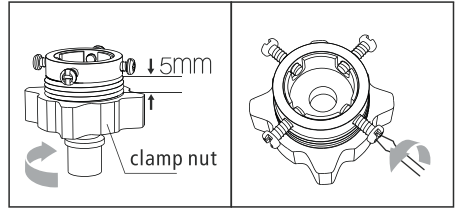


- Loosen clamp nut to show 5 mm thread.
- Loosen four bolts.

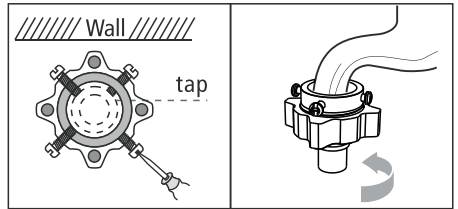

- Set connecting base on tap and tighten bolts event.
- Tighten clamp nut.

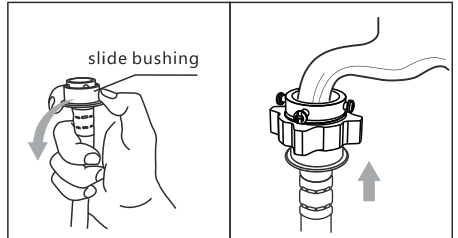


- Press slide bushing, insert inlet hose into connecting base.
- Connection finished.

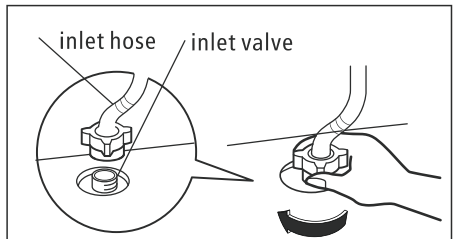


- After connection and installation, check if there is water leakage.

## 2. Connection between screw tap and inlet hose.

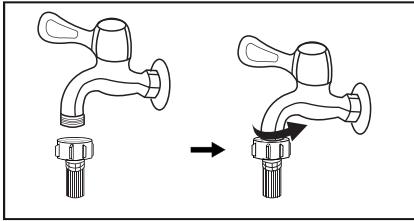

- Tap with threads and inlet hose.

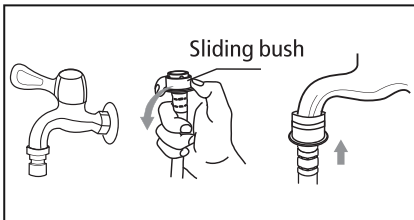

- Special tap for washing machine.




### **WARNING!**

- To prevent leakage or water damage, follow the instructions in this chapter.
  - Do not kink, crush, modify or sever water inlet hose.
-

## 12. ENVIRONMENT CONCERNS

### 12.1 Packaging Materials



The materials marked with the symbol  are recyclable.

>PE<=polyethylene

>PS<=polystyrene


>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

### 12.2 Old Machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

### 12.3 Ecological Hints

To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.



## 13. CONTACT DETAILS ELECTROLUX CUSTOMER CARE

### Indonesia

Hotline service: 08041119999  
 PT. Electrolux Indonesia  
 Gedung Plaza Kuningan  
 Menara Utara 2nd Floor,  
 Suite 201, Jl. HR Rasuna Said  
 kav C 11-14, Karet Setiabudi  
 Jakarta Selatan 12940  
 Office Tel: (+62 21) 522 7099  
 Office Fax: (+62 21) 522 7097  
 Email : [customercare@electrolux.co.id](mailto:customercare@electrolux.co.id)

### Malaysia

Consumer Care Center Tel: 1300-88-11-22  
 Electrolux Home Appliances Sdn. Bhd.  
 Corporate Office Address: Unit T2-7, 7th Floor, Tower 2 ,  
 PJ33, No. 3, Jalan Semangat, Seksyen 13,  
 46100 Petaling Jaya, Selangor  
 Office Tel : (+60 3) 7843 5999  
 Office Fax : (+60 3) 7955 5511  
 Consumer Care Center Address: Lot C6, No. 28,  
 Jalan 15/22, Taman Perindustrian Tiong Nam,  
 40200 Shah Alam, Selangor  
 Consumer Care Center Fax : (+60 3) 5524 2521  
 Email : [malaysia.customercare@electrolux.com](mailto:malaysia.customercare@electrolux.com)

### Philippines

Consumer Care Center Toll Free : 1-800-10-845-CARE 2273  
 Consumer Care Hotline : (+63 2) 845 CARE 2273  
 Electrolux Philippines, Inc.  
 12/F Robinsons Cyber Sigma Building,  
 Lawton Avenue, McKinley West,  
 Bonifacio Global City,  
 Taguig Philippines 1634  
 Trunkline: +63 2 737- 4756  
 Website : [www.electrolux.com.ph](http://www.electrolux.com.ph)  
 Email : [wecare@electrolux.com](mailto:wecare@electrolux.com)

### Singapore

Consumer Care Center Tel: (+65) 6727 3699  
 Electrolux S.E.A. Pte Ltd.  
 1 Fusionopolis Place,  
 #07-10 Galaxis, West Lobby  
 Singapore 138522.  
 Office Fax : (+65) 6727 3611  
 Email : [customer-care.sin@electrolux.com](mailto:customer-care.sin@electrolux.com)

### Thailand

Consumer Care Tel : (+66 2) 725 9000  
 Electrolux Thailand Co., Ltd.  
 Electrolux Building 14th Floor  
 1910 New Phetchaburi Road,  
 Bangkok, Huai Khwang, Bangkok 10310  
 Office Tel : (+66 2) 7259100  
 Office Fax : (+66 2) 7259299  
 Email : [customercarethai@electrolux.com](mailto:customercarethai@electrolux.com)

### Vietnam

Consumer Care Center Toll Free : 1800-58-88-99  
 Tel : (+84 8) 3910 5465  
 Electrolux Vietnam Ltd.  
 Floor 9th, A&B Tower  
 76 Le Lai street - Ben Thanh Ward - District 1  
 Ho Chi Minh City , Vietnam  
 Office Tel : (+84 8) 3910 5465  
 Office Fax : (+84 8) 3910 5470  
 Email : [vnccare@electrolux.com](mailto:vnccare@electrolux.com)

### Hongkong

Tel: (+852) 8203 0298  
 Dah Chong Hong, Ltd. - Service Centre  
 8/F., Yee Lim Godown Block C  
 2-28 Kwai Lok Street, Kwai Chung, N.T.

NOTE



www.electrolux.com



\*\*\* We may make changes to this product or manual in our continuous effort for improvement without prior notification.

Q6003P08SMSWB

